


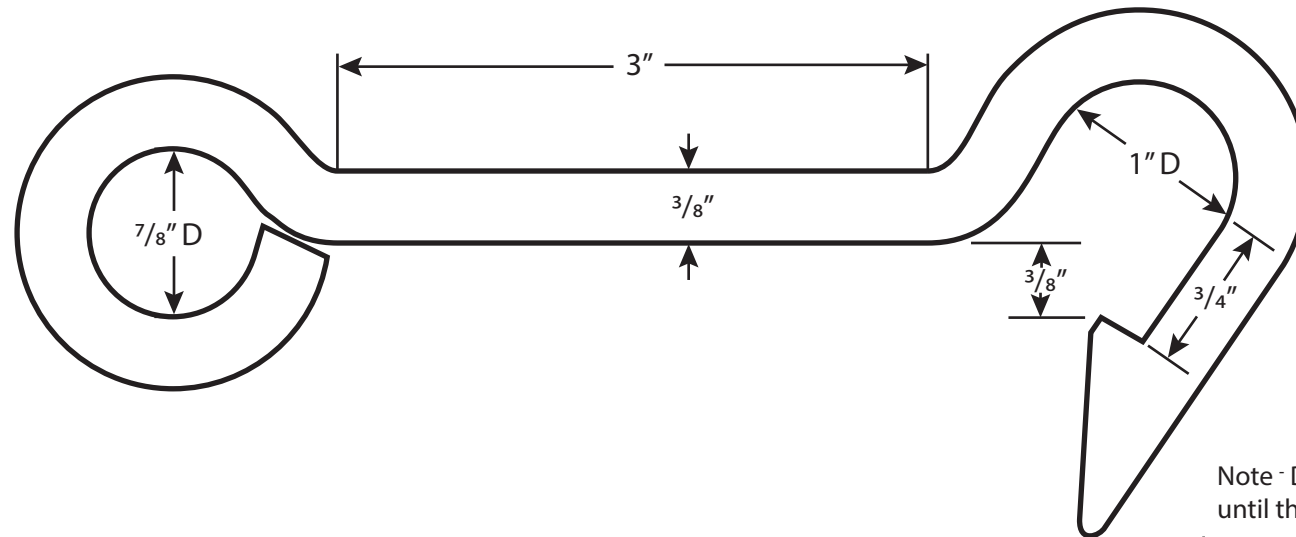

CBA Level 1 Gate Latch Scale Drawing



Note - Don't drill tenon holes until the tenon is complete

